



Features

2 stereo satellites and subwoofer with amplifier, ensures a total power of 30W

Dedicated button for bass control, highs and volume placed conveniently on the subwoofer


BT wireless technologies. Wireless music streaming thanks to BT technology

Wireless remote for your comfort

Easy install: plug & play

Product functions

1. FM Radio
2. Bluetooth – replays music wireless from Bluetooth devices
3. microSD card slot
4. AUX-in port

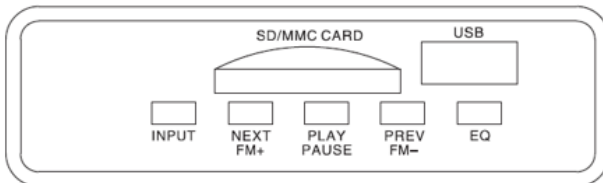

Technical details:

Power output: 30W (20W+5W*2)

Speaker unit: 4" (subwoofer)/ 2.5" (each satellite)

S/Z rapport: >70Db

Frequency: 150Hz-18KHz (satellites), 55Hz-150Hz (subwoofer)

Range: 10m

Power supply: AC220V 50Hz

Distortion: 0.3% 1 W 1KHz

Volume control, bass and highs

Dimensions: 265x140x235 mm (subwoofer)

100x100x150mm (satellite speakers x 2)

Package contents:

Subwoofer and 2 satellites

Wireless remote

User manual

Instructions for Bluetooth function:

1. First, change the input signal to "Bluetooth".
2. Second, switch the phone or other equipment with Bluetooth function into Bluetooth mode, then scan the equipment named "SPSK-21BT-PARIS" and connect to it.
3. For phones with Android there is no password, for others the password is "0000" or "1234"
4. When replaying music via Bluetooth, with the use of the button on the panel and of the wireless remote you can control the last track/play/pause/next track.
5. When receiving a phone call while playing music from the phone via Bluetooth, the Bluetooth signal will switch to a "mute" mode for the entire duration of the call.
6. When switching to another mobile phone for playing music Bluetooth, press the Play/Pause button for 3 seconds or press the associate function. Memorize the last connected equipment

1. INPUT

Pressing the INPUT button you can switch the input option between AUX/BLUETOOTH/FM.

2. Next/FM+

- a) When replaying music from USB/SD/Bluetooth press this button once to move to the next track
- b) When replaying music from FM radio, press this button once to switch frequencies. Press for 2 seconds for automatic channel search and the memorize.

3. Play/ Pause

- a) When replaying music from USB/SD/Bluetooth press this button once to play/pause.
- b) When replaying radio FM music, press this button for 2 seconds for automatic search and then memorize. Press this button again to stop automatic search of radio channels.
- c) When replaying music via Bluetooth, press for 2 seconds to begin playback.


4. Previous/FM –

- a) When replaying music through USB/SD/Bluetooth, press once to switch to the previous track
- b) When replaying music via radio FM press this button once to switch frequency. Press for 2 seconds for automated search of radio channels and then memorize.

5. Sound equalizer options:6 preset modes: standard, classic, bass, jazz, rock, pop.

SPECIFICATIONS

1. OCL amplifier included, compatible with PC, VCD, CD, LD, Walkman and others.
2. Designed with a magnetic shield, as such can be used with televisions and computers;
3. Generates a dynamic interval greater at lower frequencies, a finer medium frequency and purer and harmonious higher frequencies.

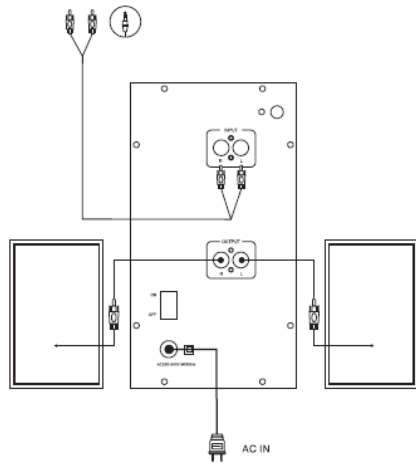

Operations

1. Please connect sound and power sources according to the schematic;
2. When all units are connected properly, turn on the power switch;
3. Open the sound sources, then adjust the volume buttons of different channels for a personalized effect.
4. After utilization, please shut down the power switches

Attentions

1. Please rotate the volume button to the minimum position before operating to prevent any deterioration to the speakers due to instantaneous impact;
2. Keep the product away from humidity. Do not expose the product to rain or humidified air.
3. Please do not open the back cover of the main speaker in case of electric shock or damaging the interior.
4. Cable protection. Do not damage the connecting cable. Avoid to pull or twist the cable in the place where it connects with the device.
5. Keep the product away from fire or heat sources. Do not bring the product close to fire or other heat sources (fireplace, heaters et.)
6. Please stop the power supply switch and remove the plug from the power socket if you are not using the system for an extended period of time.

Disposing of the product. Do not dispose of the product or other electronic components with your household waste. Use only specialized electronic waste collection centres.

WASTE DISPOSAL:



The adjacent symbol indicates that your product and / or its battery must be disposed of separately from household waste in accordance with local laws and regulations. When this product reaches the end of its life, take it to a collection point designated by the local authorities. For information about the local collection centres, please contact the town hall of your locality or access the page www.ecotic.ro

Royal Computers declare under our own responsibility that the product conforms with the European directive 2014/53/EU.

The whole text of the EU declaration of conformity is available at the following internet address: www.spacer.ro

